

Instruction manual microwave

To switch on the microwave, press the left button (for about 5 sec.), to open the microwave, press the right button (for about 5 sec.).

Place your food in a suitable dish (glass, porcelain, ceramic, heat-resistant plastic, NO METAL) and place it on the turntable. Close the door with a simple push.

Choice of microwave output:

900W	for very fast heating of liquids and beverages
600 W	heating and cooking most foods
360 W	for cooking meat and heat-sensitive foods
180 W	for fast defrosting and sources
90 W	for gentle defrosting of delicate foods

Turn the right-hand dial to select the required time. Then press the right-hand dial again to select the wattage. Confirm with the left knob and the microwave will start. When the time is up, you will hear an acoustic signal and the microwave will automatically switch off. If the door is opened during operation, the microwave switches off and the timer is interrupted. When the door is closed, the timer resumes. During operation, the selected time can be changed or cancelled by turning it back to $\rightarrow 0 \leftarrow$.

